


RICCAR PARTS BOOK

R10CV Cordless Vacuum

LRPB-R10CV

HANDLE AND BODY

Riccar R10CV Model

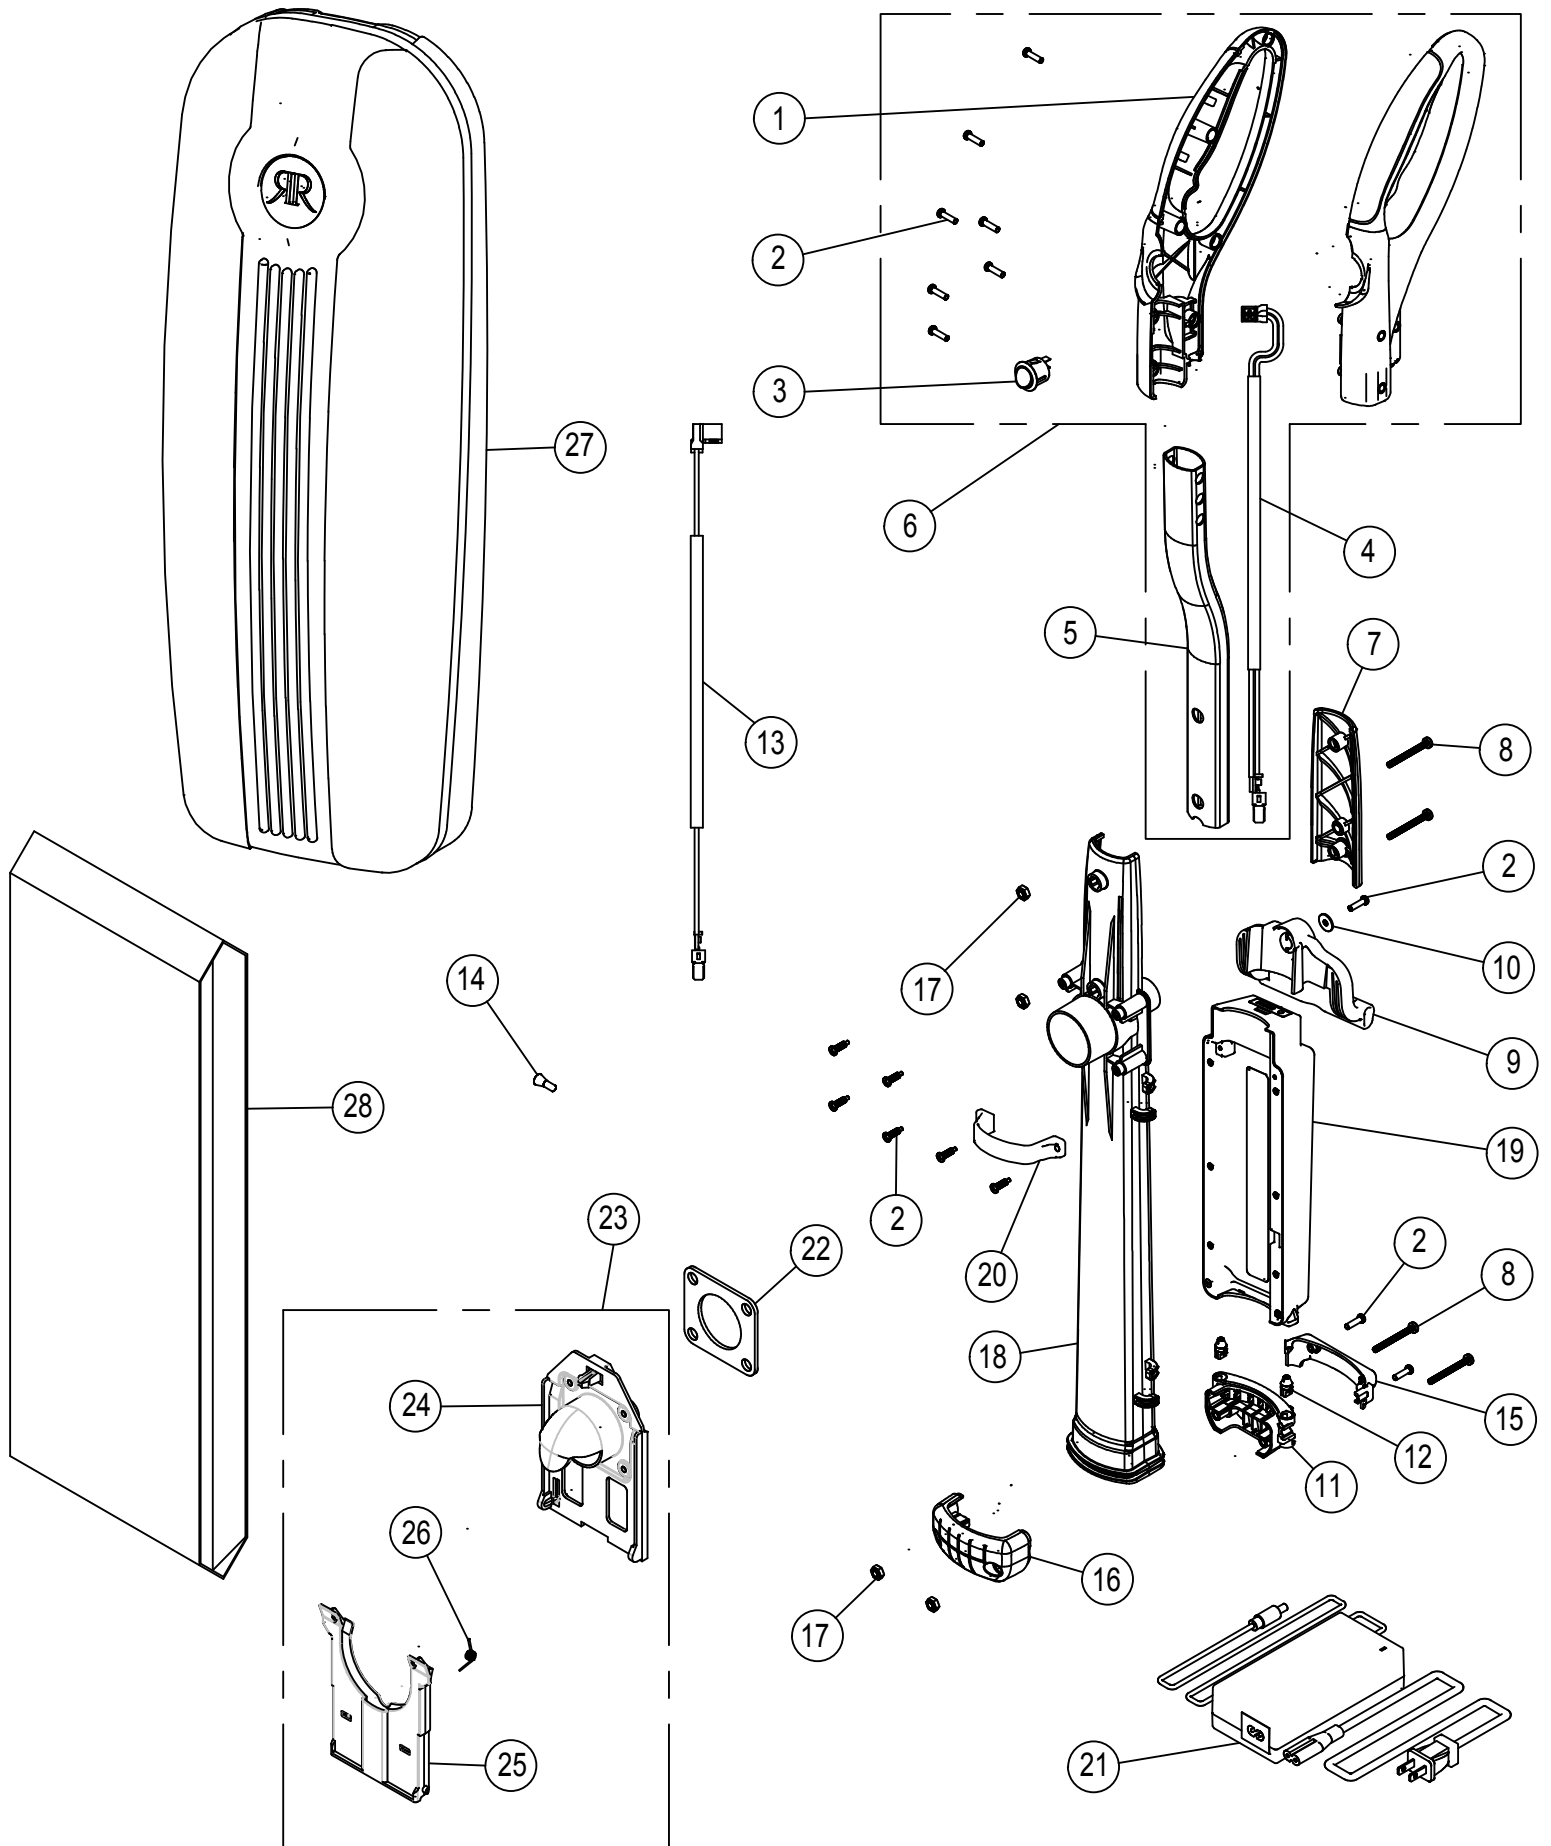









HANDLE and BODY

Ricar R10CV Model

KEY	PART NO.	DESCRIPTION
1	C223-0100	Handle Grip Assembly
2	A732-8314	Screw
3	A328-1500	Switch
4	B223-1500	Wire Harness Handle
5	B220-3400	Handle Tube
6	D223-0100	Handle Assy
7	B220-3114	Handle Back Cover
8	A432-0705	Screw
9	B223-0300	Carry Handle
10	A733-5100	Washer
11	B223-0900	Neck Coupling Back
12	B223-1300	Post
13	B223-1600	Wire Harness Coupling
14	B223-2100	Connector
15	B223-1000	Cable Cover
16	B220-1014	Neck Coupling Front
17	A432-0805	Hex Nut
18	B220-3014	Handle Duct
19	C223-1800	Battery
20	B223-0800	Battery Clamp
21	C223-2000	Charger
22	B220-3900	Bag Mount Seal
23	D484-2282	Bag Mount Assembly
24	B220-3814	Bag Mount
25	B434-2282	Bag Mount Hinge
26	B434-3400	Bag Collar Spring
27	D220-5100	Hard Shell Bag
28	SLH-6	HEPA Bag (Pkg of 6)

NOZZLE

Riccar R10CV Model

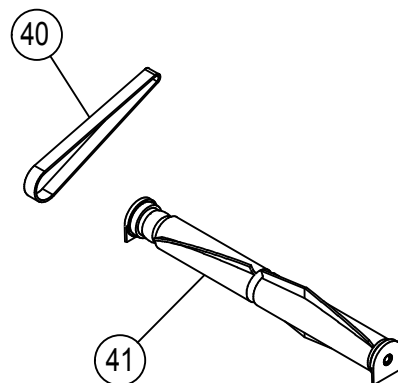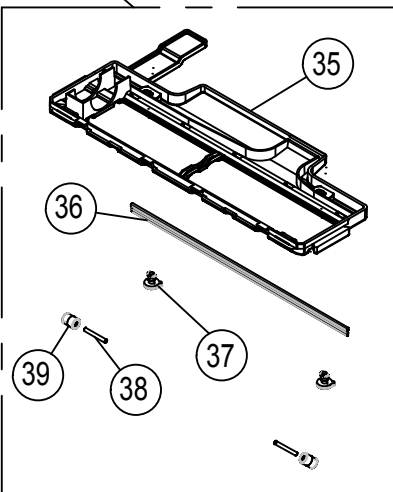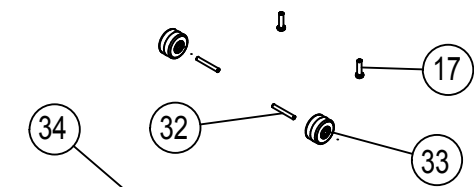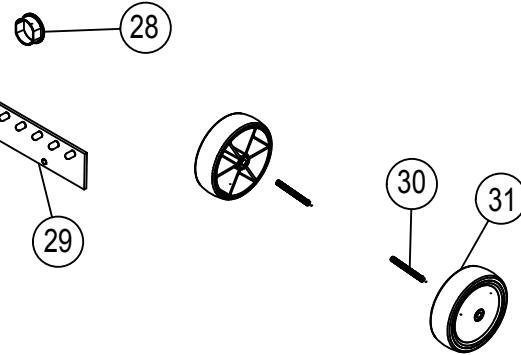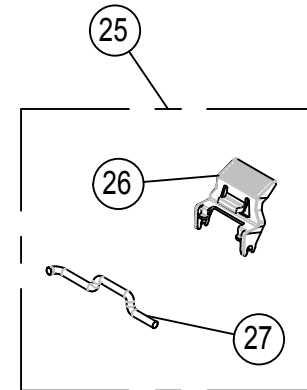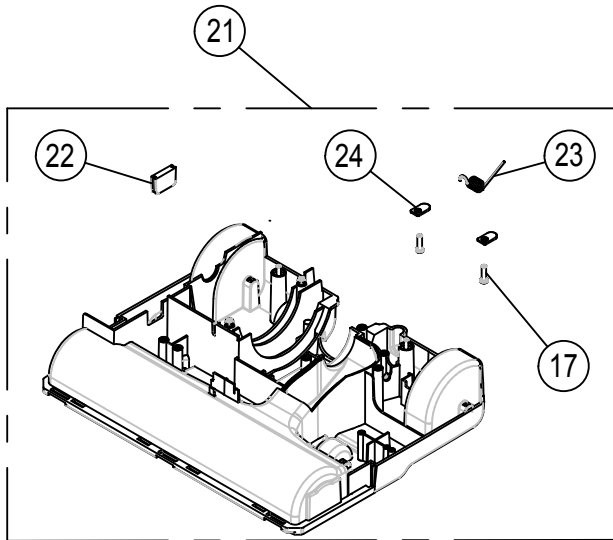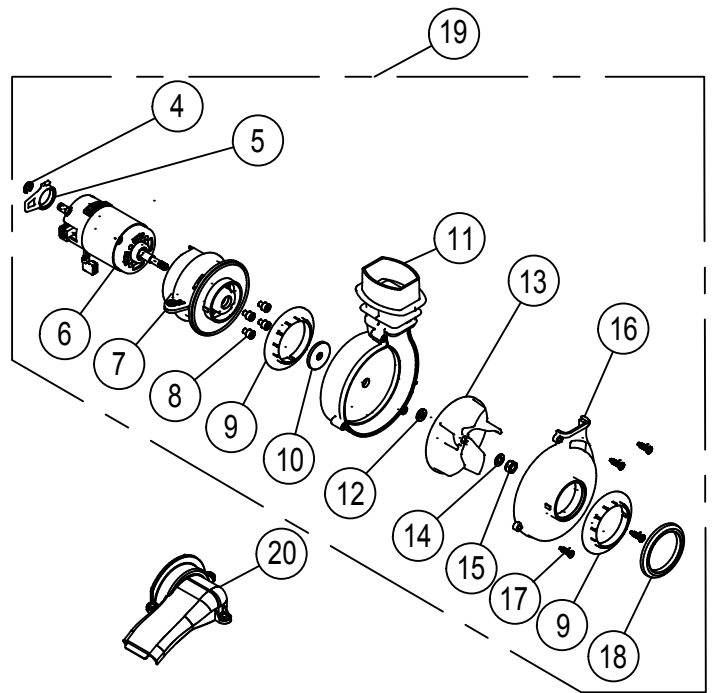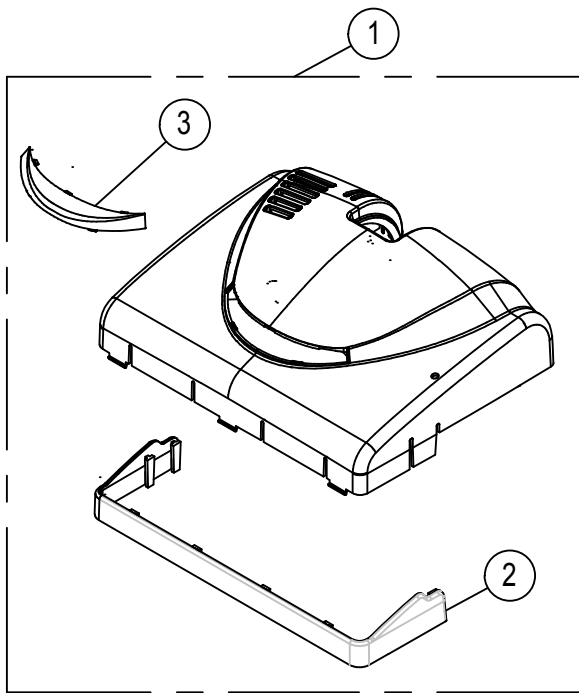

NOZZLE**Riccar R10CV Model**

KEY	PART NO.	DESCRIPTION
1	D223-0300	Nozzle Cover Assembly
2	B220-2614	Furniture Guard
3	B018-0415	Lens
4	A732-3000	E Clip
5	B223-2800	Motor Support Boss
6	C223-1600	Motor
7	B223-0100	Motor Housing
8	A733-5000	Screw Socket HD
9	B220-4414	Pivot Bushing
10	B220-4500	DC Motor Seal
11	B220-4014	Scroll Housing RH
12	A733-3300	Washer
13	B220-4314	Motor Fan
14	A733-2200	Washer
15	A432-0605	Hex Nut
16	B220-4114	Scroll Housing LH
17	A732-8314	Screw
18	B480-4514	Motor Inlet Seal
19	D223-0400	Motor Assembly
20	B220-0214	Inlet Duct Cover
21	D220-0114	Basetray Assembly
22	B016-1914	Basetray Plug
23	B220-0900	Spring
24	54.136	Rear Axle Clamp
25	D220-0714	Upright Stop Pedal Assy
26	B220-0714	Upright Stop
27	B220-0800	Upright Stop Pedal Pivot
28	A018-1414	Hole Plug
29	B317-1100	LED PCA
30	B010-2800B	Large Wheel Axle
31	C220-0531B	Rear Wheel Assembly
32	B010-0810	Small Wheel Axle
33	B370-1843	Bottom Plate Wheels
34	D220-0414	Baseplate Assembly
35	B220-0314	Baseplate
36	B015-3000B	Squeegee
37	B220-0414	Baseplate Cover Screw
38	B370-1700	Bottom Plate Axle
39	C010-2714	Front Wheel Assy w/Bushing
40	RBS-2	Belt (Pkg of 2)
41	D223-1700	Agitator